




HALF-SCREEN INSTALLATION GUIDE

THE EASIEST WINDOW SCREEN YOU WILL EVER USE

Begin by opening or tilting the lower sash of your window toward the inside of the house to expose the window screen track. Tilt FlexScreen half-screen at an angle and feed it completely through the window opening.


STEP 1

Position the FlexScreen half-screen with the vinyl adapter at the top. Slide one side completely into the window screen track.

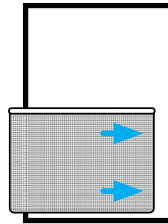


STEP 3

Pull the half-screen towards you and seat it into the screen track.

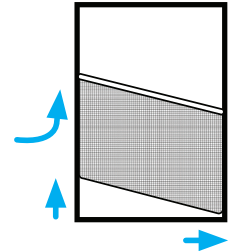


STEP 2

While firmly holding the bottom of the inserted side in place, lift the opposite side of the half-screen until the frame clears the opening of the screen track.

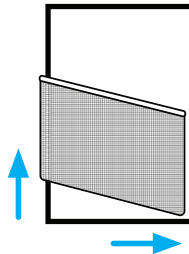

STEP 4

Lower the FlexScreen half-screen until it rests against the sill and close your window.

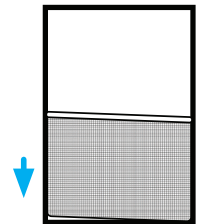

CONTACT US TODAY: flexscreen.com Learn more at www.flexscreen.com/halfscreen




HALF-SCREEN REMOVAL GUIDE

THE EASIEST WINDOW SCREEN YOU WILL EVER USE

Begin by opening or tilting the lower sash of your window toward the inside of the house to expose the window screen track.


STEP 1

Raise the FlexScreen half-screen until you can grasp the bottom edge of the frame.

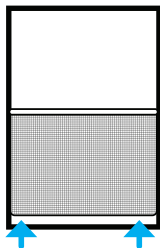


STEP 3

Gently push the raised side toward the outside of the window.

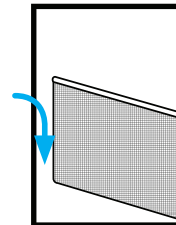


STEP 2

While holding one corner completely stationary, lift the opposite side until the frame of the half-screen clears the window screen track.

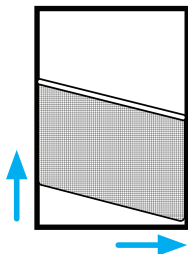

STEP 4

Pivot the FlexScreen half-screen outwards to fully remove it from the window screen track.

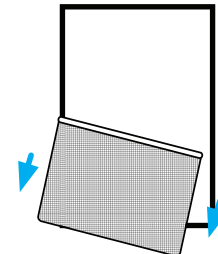

CONTACT US TODAY: flexscreen.com  Learn more at www.flexscreen.com/halfscreen